


MANUALE DI ISTRUZIONI

PER UN CORRETTO E SICURO USO DELL'APPARECCHIO

IT

Kooper®

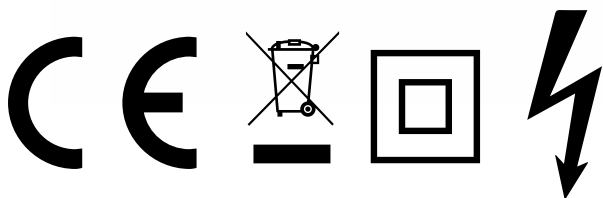

ZANZARIERA ELETTRICA

2192708


220-240 50/60 Hz - 2W

UNICAMENTE AD USO DOMESTICO

ATTENZIONE! LEGGERE ATTENTAMENTE LE ISTRUZIONI E LE AVVERTENZE CONTENUTE NEL PRESENTE LIBRETTO E CONSERVARLE PER ULTERIORI CONSULTAZIONI PER TUTTA LA VITA DEL PRODOTTO. ESSE INFATTI FORNISCONO INDICAZIONI IMPORTANTI PER QUANTO RIGUARDA LA FUNZIONALITÀ E LA SICUREZZA NELL'INSTALLAZIONE, NELL'USO E NELLA MANUTENZIONE DEL PRODOTTO.

GALILEO SPA STRADA GALLI N. 27 00019 TIVOLI (RM) - MADE IN CHINA



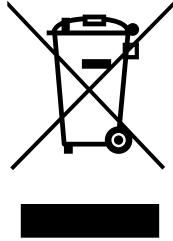

**TRATTAMENTO DEL DISPOSITIVO
ELETTRICO ED ELETTRONICO A FINE VITA**

**INFORMAZIONE AGLI UTENTI PER IL CORRETTO SMALTIMENTO
DEL PRODOTTO AL SENSI DELLA DIRETTIVA EUROPEA 2012/19/EU E DEL D.LGS N. 49/2014.**

CARO CONSUMATORE,
È IMPORTANTE RICORDARTI CHE, COME BUON CITTADINO, AVRAI L'OBBLIGO DI SMALTIRE QUESTO PRODOTTO NON COME RIFIUTO URBANO, MA DI EFFETTUARE UNA RACCOLTA SEPARATA. IL SIMBOLO SOPRA INDICATO E RIPORTATO SULL'APPARECCHIATURA INDICA CHE IL RIFIUTO DEVE ESSERE OGGETTO DI "RACCOLTA SEPARATA". I DISPOSITIVI ELETTRICI ED ELETTRONICI NON DEVONO ESSERE CONSIDERATI RIFIUTI DOMESTICI. PERTANTO, IL PRODOTTO ALLA FINE DELLA SUA VITA UTILE, NON DEVE ESSERE SMALTITO INSIEME AL RIFIUTI URBANI. L'UTENTE DOVRÀ CONFERIRE (O FAR CONFERIRE) IL RIFIUTO AL CENTRI DI RACCOLTA DIFFERENZIATA PREDISPOSTI DALLE AMMINISTRAZIONI LOCALI, OPPURE CONSEGNARLO AL RIVENDITORE CONTRO L'ACQUISTO DI UNA NUOVA APPARECCHIATURA DI TIPO EQUIVALENTE. LA RACCOLTA DIFFERENZIATA DEL RIFIUTO E LE SUCCESSIVE OPERAZIONI DI TRATTAMENTO, RECUPERO E SMALTIMENTO FAVORISCONO LA PRODUZIONE DI APPARECCHIATURE CON MATERIALI RICICLATI E LIMITANO GLI EFFETTI NEGATIVI SULL'AMBIENTE E SULLA SALUTE EVENTUALMENTE CAUSATI DA UNA GESTIONE IMPROPRIA DEL RIFIUTO.

GRAZIE!

DISPOSAL OF THE ELECTRIC OR ELECTRONIC DEVICE AT THE END OF ITS LIFE

**INFORMATION FOR USERS ABOUT THE CORRECT DISPOSAL
OF THE PRODUCT ACCORDING TO THE EUROPEAN DIRECTIVE 2012/19/EU
AND TO THE LEGISLATIVE DECREE N. 49/2014.**

DEAR CUSTOMER,
IT IS IMPORTANT TO REMIND YOU THAT, AS A GOOD CITIZEN, YOU CANNOT DISPOSE OF THIS PRODUCT AS MUNICIPAL WASTE; YOU HAVE TO DO A SEPARATE COLLECTION. THE SYMBOL LABELLED ON THE APPLIANCE INDICATES THAT THE RUBBISH IS SUBJECT TO "SEPARATE COLLECTION". ELECTRICAL AND ELECTRONIC APPLIANCE CANNOT BE CONSIDERED AS DOMESTIC WASTE. THEREFORE, AT THE END OF ITS USEFUL LIFE, THIS PRODUCT SHOULD NOT BE DISPOSED WITH MUNICIPAL WASTES. THE USER MUST THEREFORE ASSIGN OR (HAVE COLLECTED) THE RUBBISH TO A TREATMENT FACILITY UNDER LOCAL ADMINISTRATION, OR HAND IT OVER TO THE RESELLER IN EXCHANGE FOR AN EQUIVALENT NEW PRODUCT.

THE SEPARATE COLLECTION OF THE RUBBISH AND THE SUCCESSIVE TREATMENT, RECYCLING AND DISPOSAL OPERATIONS PROMOTE PRODUCTION OF APPLIANCES MADE WITH RECYCLED MATERIALS AND REDUCE NEGATIVE EFFECTS ON HEALTH AND THE ENVIRONMENT CAUSED BY IMPROPER TREATMENT OF RUBBISH.

THANKYOU!

AVVERTENZE GENERALI DI SICUREZZA

PERICOLO PER I BAMBINI

■ QUESTO APPARECCHIO ELETTRICO NON È UN GIOCATTOLO. UTILIZZARLO E RIPORLO FUORI DALLA PORTATA DEI BAMBINI. I COMPONENTI DELL'IMBALLAGGIO (EVENTUALI SACCHETTI IN PLASTICA, CARTONI, ECC.) DEVONO ESSERE TENUTI LONTANI DALLA PORTATA DEI BAMBINI.

■ L'USO DI QUESTO APPARECCHIO È CONSENTITO AI BAMBINI A PARTIRE DAGLI 8 ANNI DI ETÀ E ALLE PERSONE CON RIDOTTE CAPACITÀ FISICHE, SENSORIALI O MENTALI OPPURE CON MANCATA ESPERIENZA E CONOSCENZA, SUPERVISIONATI O ISTRUITI DA PERSONE ADULTE E RESPONSABILI PER LA LORO SICUREZZA. QUESTO APPARECCHIO NON È DA INTENDERSI ADATTO ALL'USO DA PARTE DI PERSONE (INCLUSI I BAMBINI) CON RIDOTTE CAPACITÀ FISICHE, SENSORIALI O MENTALI, O PRIVE DI ESPERIENZA E CONOSCENZA, A MENO CHE SIANO STATE SUPERVISIONATE O ISTRUITE RIGUARDO ALL'USO DELL'APPARECCHIO DA UNA PERSONA RESPONSABILE DELLA LORO SICUREZZA E SOLO DOPO ESSERSI ACCERTATI CHE ABBIANO COMPRESO I PERICOLI DERIVANTI DALL'USO.

■ I BAMBINI DEVONO ESSERE TENUTI SOTTO CONTROLLO PER EVITARE CHE GIOCHINO CON L'APPARECCHIO.

PERICOLO LESIONI!

■ PRIMA DI SOSTITUIRE GLI ACCESSORI SPEGNERE L'APPARECCHIO E STACCARE LA SPINA! NON INSERIRE LA SPINA DELL'APPARECCHIO NELLA PRESA SENZA AVER PRIMA INSTALLATO TUTTI GLI ACCESSORI NECESSARI.

- PRESTARE MASSIMA ATTENZIONE NEL CASO IN CUI SI UTILIZZI L'APPARECCHIO IN PRESENZA DI BAMBINI.
- QUANDO L'APPARECCHIO È IN FUNZIONE CONTROLLARLO COSTANTEMENTE E NON LASCIARLO MAI INCUSTODITO.
- TOGLIERE LA SPINA DALLA PRESA QUANDO L'APPARECCHIO NON È UTILIZZATO E LASCIARE RAFFREDDARE L'APPARECCHIO PRIMA DI EFFETTUARE LA PULIZIA
- NON EFFETTUARE ALCUN TENTATIVO DI PULIZIA MENTRE L'APPARECCHIO È IN FUNZIONE. NON UTILIZZARE OGGETTI ACUMINATI PER RIMUOVERE EVENTUALI CORPI ESTRANEI
- LE OPERAZIONI DI PULIZIA NON DEVONO ESSERE EFFETTUATE DA BAMBINI NON SORVEGLIATI

PERICOLO SCOSSA ELETTRICA

- QUESTO APPARECCHIO È CONCEPITO PER FUNZIONARE UNICAMENTE A CORRENTE ALTERNATA. PRIMA DI METTERLO IN FUNZIONE ASSICURARSI CHE LA TENSIONE DI RETE CORRISPONDA A QUELLA INDICATA SULLA TARGHETTA DATI.
- COLLEGARE L'APPARECCHIO SOLO A PRESE DI CORRENTE AVENTI PORTATA MINIMA 10 AMPERE.
- NON STRATTONARE O TIRARE L'APPARECCHIO PER TOGLIERE LA SPINA DALLA PRESA DI CORRENTE.
- UTILIZZARE UNA PROLUNGA ELETTRICA SOLO SE IN PERFETTO STATO.
- NON LASCIARE L'APPARECCHIO ESPOSTO AD AGENTI ATMOSFERICI (PIOGGIA, GELO, SOLE, ECC.).
- NON UTILIZZARE MAI L'APPARECCHIO:
CON LE MANI BAGNATE O UMIDE;

SE È CADUTO E PRESENTA EVIDENTI ROTTURE O ANOMALIE DI FUNZIONAMENTO;

SE LA SPINA ELETTRICA È DIFETTOSA;

IN AMBIENTI UMIDI O SATURI DI GAS.

- NON COPRIRE L'APPARECCHIO CON ASCIUGAMANI, INDUMENTI, ECC.
- COLLOCARE L'APPARECCHIO SOLO SU PIANI DI APPOGGIO ORIZZONTALI E STABILI, LONTANO DA DOCCE, VASCHE DA BAGNO, LAVANDINI, ECC.
- SE L'APPARECCHIO SI DOVESSE BAGNARE O ENTRASSE IN CONTATTO CON ACQUA NON UTILIZZARLO E FARLO CONTROLLARE DA UN LABORATORIO SPECIALIZZATO.
- TOGLIERE SEMPRE LA SPINA DALLA RETE DI ALIMENTAZIONE ELETTRICA IMMEDIATAMENTE DOPO L'USO E PRIMA DI ESEGUIRE QUALSIASI INTERVENTO DI PULIZIA O MANUTENZIONE.
- LE EVENTUALI RIPARAZIONI DEVONO ESSERE ESEGUITE SOLO DA UN TECNICO SPECIALIZZATO. RIPARARE DA SÉ L'APPARECCHIO PUÒ ESSERE ESTREMAMENTE PERICOLOSO.
- UN APPARECCHIO FUORI USO DEVE ESSERE RESO INUTILIZZABILE, TAGLIANDO IL CAVO DI ALIMENTAZIONE ELETTRICA, PRIMA DI BUTTARLO.
- PULIRE L'APPARECCHIO UTILIZZANDO UN PANNO ASCIUTTO. NON USARE SOLVENTI O DETERSIVI ABRASIVI.
- L'APPARECCHIO È CONCEPITO PER L'USO DOMESTICO.
- NON INSERIRE OGGETTI NELLE FESSURE DELL'APPARECCHIO;
- NON ADATTO PER L'USO IN GRANAI, STALLE E LUOGHI SIMILI;
- NON ESPORRE MAI L'APPARECCHIO ALLA PIOGGIA, GETTI DI INNAFFIATORI; PERICOLO DI SCOSSA ELETTRICA!
- NON LASCIARLO ALL'APERTO E NON UTILIZZARLO AD AMBIENTI MOLTO

SPORCHI;

- PER EVITARE IL RISCHIO DI SCOSSA ELETTRICA, NON RIMUOVERE ALCUNA PARTE INTERNA FISSA PER TENTARE DI AGGIUSTARE IL PRODOTTO;
- IN CASO DI GUASTI O MALFUNZIONAMENTI, SPEGNERE L'APPARECCHIO E NON MANOMETTERLO. PER L'EVENTUALE RIPARAZIONE RIVOLGERSI ESCLUSIVAMENTE AD UN CENTRO DI ASSISTENZA TECNICA AUTORIZZATO.

ATTENZIONE! IL MANCATO RISPETTO DELLE AVVERTENZE CONTENUTE IN QUESTO MANUALE E L'USO IMPROPRIO DELL'ARTICOLO PUÒ COMPORTARE LESIONI

- L'APPARECCHIO È DESTINATO AL SOLO USO INTERNO
- SE IL CAVO DI ALIMENTAZIONE È DANNEGGIATO, ESSO DEVE ESSERE SOSTITUITO DAL COSTRUTTORE O DAL SUO SERVIZIO DI ASSISTENZA TECNICA O COMUNQUE DA UNA PERSONA CON QUALIFICA SIMILARE, IN MODO DA PREVENIRE OGNI RISCHIO.
- NON USARE NEBULIZZATORI SPRAY (INSETTICIDI, SPRAY PER CAPELLI ECC.) NELLE VICINANZE DELL'APPARECCHIO

SPIEGAZIONE SIMBOLI : ATTENZIONE TENSIONE PERICOLOSA!



NON UTILIZZARE IN AMBIENTI SATURI DI POLVERI POTENZIALMENTE ESPLOSIVE O IN PRESENZA DI VAPORI INFIAMMABILI TENERE FUORI DALLA PORTATA DEI BAMBINI

COMPONENTI PRINCIPALI



1. Griglia
2. Spina
3. Spazzolina di pulizia
4. Vano posteriore estraibile

UTILIZZO

Inserire la zanzariera nella presa di corrente.

- Solo per uso interno;
- Tenere l'apparecchio fuori dalla portata dei bambini;
- Non utilizzare l'apparecchio in luoghi in cui potrebbero esistere vapori infiammabili o polveri esplosive.

PULIZIA

Rimuovere sempre l'apparecchio dalla presa prima di pulirlo; pulire il retro del vassoio una volta a settimana con dell'acqua insaponata tiepida, quindi asciugarlo per bene prima di reinserirlo. Utilizzare accuratamente lo spazzolino fornito in dotazione per rimuovere eventuali insetti residui; pulire l'apparecchio una volta al mese con un panno umido non abrasivo.

CONDIZIONI DI GARANZIA

La presente garanzia si intende prestata al consumatore, intendendo per consumatore colui che utilizza il bene per scopi estranei all'attività imprenditoriale o professionale eventualmente svolta, e, pertanto, per uso domestico/privato. Inoltre non pregiudica in alcun modo i diritti del consumatore stabiliti dal DLGS 206/05. Questo certificato va conservato assieme alla ricevuta fiscale o altro documento reso fiscalmente obbligatorio.

- 1.** La Galileo SpA garantisce l'apparecchio per un periodo di 2 anni dalla data di acquisto (12 mesi se acquistato con fattura e non con scontrino fiscale).
- 2.** La garanzia è valida esclusivamente sul territorio italiano compresa la Repubblica di San Marino e la Città del Vaticano, e deve essere comprovata da scontrino fiscale o qualunque altra prova d'acquisto, che riporti il nominativo del Punto Vendita, la data di acquisto dell'apparecchio nonché gli estremi identificativi dello stesso (tipo, modello).
- 3.** Per garanzia, s'intende la sostituzione o riparazione gratuita delle parti componenti l'apparecchio che sono risultate difettose all'origine per vizi di fabbricazione.
- 4.** Entro un anno di vita del prodotto si ritiene il difetto esistente all'origine, successivamente deve esserne provata l'esistenza.
- 5.** Manopole, lampade, parti in vetro e in plastica, tubazioni e accessori così come tutte le parti asportabili e tutte le parti estetiche non sono coperte da garanzia, eventuali difetti estetici vanno riscontrati e denunciati con immediatezza dopo l'acquisto.
- 6.** Tutti i materiali soggetti ad usura (guarnizioni in gomma/plastica, cinghie ecc.) non sono coperti da garanzia a meno che venga dimostrata la difettosità risalente a vizio di fabbricazione delle stesse.
- 7.** La Galileo S.p.A. declina ogni responsabilità per eventuali danni che possano derivare, direttamente o indirettamente a persone e cose, come conseguenza del mancato rispetto delle istruzioni tutte, incluse nell'apposito manuale per l'uso dell'apparecchio allegato a ciascuno apparecchio, da parte dell'utente ed in particolar modo per quanto concerne le avvertenze relative alla installazione, all'uso e manutenzione dell'apparecchio stesso.

LA GARANZIA NON DIVENTA OPERANTE NEI SEGUENTI CASI:

- a.** Danni dovuti al trasporto o alla movimentazione delle merci
- b.** Interventi errati di installazione e montaggio, così come l'errata connessione o errata erogazione dalle reti di alimentazione elettrica, mancanza di allacciamento alla presa di terra, e tutte le eventuali regolazioni errate
- c.** Installazione errata, imperfetta o incompleta per incapacità d'uso da parte dell'Utente o dell'installatore, se non vengono rispettate le indicazioni di conservazione e utilizzo degli stessi previste nei manuali, eccessive condizioni climatiche ambientali etc.
- d.** La garanzia non opera per problemi legati esclusivamente al mancato rispetto delle aspettative soggettive del cliente
- e.** Danni causati da agenti atmosferici (fulmini, terremoti, incendi, alluvioni, ecc.)
- f.** Riparazioni, modifiche o manomissioni effettuate da personale non idoneo. Per guasti dovuti a mancanza di regolare manutenzione (pulizia batterie condensanti, fori di drenaggio acqua di condensa, filtri scarico ed entrata acqua, eliminazione corpi estranei, calcare ecc.)
- g.** Assenza di prova d'acquisto
- h.** L'uso improprio dell'apparecchio, non di tipo domestico o diverso da quanto stabilito dal produttore
- i.** Per tutte le circostanze esterne che non siano riconducibili a difetti di fabbricazione.

USER INSTRUCTIONS

EN **Kooper**[®]

- FOR A CORRECT AND SAFE USE OF THE APPLIANCE

ONLY FOR HOME USE. ATTENTION! READ THE INSTRUCTIONS GIVEN IN THIS HANDBOOK VERY CAREFULLY.

IT SHOULD BE PUT ASIDE FOR FURTHER CONSULTATION DURING THE ENTIRE LIFECYCLE OF THE PRODUCT SINCE IT GIVES IMPORTANT INDICATIONS ON THE PRODUCT'S FUNCTIONS AND SAFETY DURING INSTALLATION, USE AND MAINTENANCE.

GENERAL SAFETY INSTRUCTIONS

DANGER FOR CHILDREN!

- THIS ELECTRICAL APPLIANCE IS NOT A TOY. USE AND STORE OUT OF THE REACH OF CHILDREN. PACKAGING COMPONENTS (PLASTIC BAGS, CARTONS, ETC.) SHOULD BE KEPT OUT OF REACH OF CHILDREN.

- THIS APPLIANCE IS INTENDED FOR USE BY CHILDREN 8 YEARS OF AGE OR OLDER AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, OR LACK OF EXPERIENCE AND KNOWLEDGE, SUPERVISED OR INSTRUCTED BY ADULTS RESPONSIBLE FOR THEIR SAFETY. THIS APPLIANCE IS NOT INTENDED FOR USE BY PERSONS (INCLUDING CHILDREN) WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, OR LACK OF EXPERIENCE AND KNOWLEDGE, UNLESS THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY AND HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY.

DANGER OF INJURY!

- BEFORE REPLACING ACCESSORIES, SWITCH OFF THE DEVICE AND UNPLUG IT! DO NOT INSERT THE APPLIANCE PLUG INTO THE SOCKET WITHOUT FIRST INSTALLING ALL NECESSARY

ACCESSORIES.

- BE CAREFUL WHEN USING THE APPLIANCE IN THE PRESENCE OF CHILDREN.
- WHEN THE UNIT IS RUNNING CHECK IT CONSTANTLY AND NEVER LEAVE IT UNATTENDED.
- REMOVE THE PLUG FROM THE SOCKET WHEN THE APPLIANCE IS NOT IN USE AND LET THE APPLIANCE COOL DOWN BEFORE CLEANING.
- DO NOT ATTEMPT TO CLEAN THE UNIT WHILE IT IS OPERATING. DO NOT USE SHARP OBJECTS TO REMOVE ANY FOREIGN MATTER THAT HAS REMAINED
- CLEANING OPERATIONS SHOULD NOT BE CARRIED OUT BY UNSUPERVISED CHILDREN ELECTRIC SHOCK HAZARD!
- THIS UNIT IS DESIGNED TO OPERATE ON AC POWER ONLY. BEFORE PUTTING THE UNIT INTO OPERATION, MAKE SURE THAT THE MAINS VOLTAGE CORRESPONDS TO THAT INDICATED ON THE RATING PLATE.
- CONNECT THE APPLIANCE ONLY TO SOCKETS WITH A MINIMUM CAPACITY OF 10 AMPERES.
- DO NOT TUG OR PULL THE APPLIANCE TO REMOVE THE PLUG FROM THE POWER OUTLET.
- CHILDREN MUST BE KEPT UNDER SUPERVISION TO ENSURE THEY DO NOT PLAY WITH THE APPLIANCE.
- USE AN ELECTRIC EXTENSION CORD ONLY IF IT IS IN PERFECT CONDITION.
- DO NOT LEAVE THE APPLIANCE EXPOSED TO THE ELEMENTS (RAIN, FROST, SUN, ETC.).
- NEVER USE THE APPLIANCE: - WITH WET OR DAMP HANDS. - IF IT HAS FALLEN AND HAS OBVIOUS CRACKS OR APPEARS TO

MALFUNCTION. - IF THE ELECTRICAL PLUG IS DEFECTIVE; - IN DAMP OR GAS-SATURATED ENVIRONMENTS.

- DO NOT COVER THE APPLIANCE WITH TOWELS, CLOTHING, ETC.
- PLACE THE APPLIANCE ONLY ON HORIZONTAL, STABLE SURFACES, AWAY FROM SHOWERS, BATHTUBS, SINKS, ETC.
- IF THE APPLIANCE BECOMES WET OR COMES INTO CONTACT WITH WATER DO NOT USE IT AND HAVE IT CHECKED BY A SPECIALIZED LABORATORY.
- ALWAYS REMOVE THE PLUG FROM THE MAINS SUPPLY IMMEDIATELY AFTER USE AND BEFORE CARRYING OUT ANY CLEANING OR MAINTENANCE WORK.
- ALL REPAIRS MUST ONLY BE CARRIED OUT BY A SPECIALIST TECHNICIAN. REPAIRING THE APPLIANCE BY YOURSELF CAN BE EXTREMELY DANGEROUS.
- AN OUT OF ORDER APPLIANCE MUST BE MADE UNUSABLE BY CUTTING THE ELECTRICAL CABLE BEFORE THROWING IT AWAY.
- WIPE THE APPLIANCE USING A DRY CLOTH. DO NOT USE SOLVENTS OR ABRASIVE DETERGENTS.
- THE APPLIANCE IS DESIGNED FOR DOMESTIC USE.
- DO NOT INSERT OBJECTS INTO THE CRACKS OF THE APPLIANCE;
- NOT SUITABLE FOR USE IN BARN, STABLES OR SIMILAR PLACES;
- NEVER EXPOSE THE APPLIANCE TO RAIN OR JETS OF WATER AS THERE IS A DANGER OF ELECTRIC SHOCK!
- DO NOT LEAVE IT OUTDOORS AND DO NOT USE IT IN VERY DIRTY ENVIRONMENTS;
- TO AVOID THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE ANY FIXED INNER PARTS IN AN ATTEMPT TO ADJUST THE PRODUCT;
- IN CASE OF FAILURE OR MALFUNCTION, TURN OFF THE

APPLIANCE AND DO NOT TAMPER IT. FOR ANY REPAIR, PLEASE CONTACT AN AUTHORISED TECHNICAL SERVICE CENTRE ONLY. CAUTION! FAILURE TO COMPLY WITH THE WARNINGS CONTAINED IN THIS MANUAL AND IMPROPER USE OF THE ARTICLE MAY RESULT IN INJURY

- THE APPLIANCE IT IS INTENDED FOR INTERNA USE ONLY
- IF THE POWER CORD IS DAMAGED, IT MUST B REPLACED BY THE MANUFACTURER OR ITS TECHNICAL SERVICE OR BY A QUALIFIED TECHNICIAN, TO PREVENT ANY RISK.
- DO NOT USE SPR Y ATOMISERS (INSECTICIDES, HAIR SPRAYS ETC.) IN THE VICINITY OF THE APPLIANCE

EXPLANATION SYMBOLS : ATTENTION DANGEROUS VOLTAGE!



- DO NOT USE IN ENVIRONMENTS SATURATED WITH POTENTIALLY EXPLOSIVE POWDER OR IN THE PRESENCE OF FLAMMABLE VAPERS KEEP OUT OF REACH OF CHILDREN

GENERAL WARNINGS

NON-REMOVABLE BATTERIES BATTERY WARNINGS

- CHARGING MUST BE SUPERVISED BY AN ADULT - DO NOT IMMERSE ITEM OR BATTERIES/BATTERY PACKS/ACCUMULATORS IN WATER - DO NOT EXPOSE BATTERIES/BATTERY PACKS/ACCUMULATORS TO HEAT OR FIRE - IF LIQUID SPILLED FROM BATTERIES/BATTERIES/BATTERY PACKS/ACCUMULATORS COMES INTO CONTACT WITH CLOTHING OR SKIN, IMMEDIATELY WASH THE PART WITH CLEAN WATER AND SEEK MEDICAL

ADVICE - STOP USING BATTERIES/BATTERIES/BATTERY PACKS/ACCUMULATORS IMMEDIATELY IF YOU NOTICE ANY ABNORMALITIES - AVOID CONTACT OF BATTERIES/BATTERY PACKS/ACCUMULATORS WITH METAL OBJECTS, SUCH AS KEYS OR COINS - BATTERIES/BATTERY PACKS/ACCUMULATORS MAY EXPLODE OR RELEASE TOXIC SUBSTANCES. RISK OF FIRE OR BURNS. DO NOT OPEN, CRUSH, MODIFY, DISASSEMBLE, PUNCTURE, HEAT OR BURN; - A BATTERY PACK IS TO BE UNDERSTOOD AS A SINGLE UNIT WHICH MUST NOT BE TORN, OPENED OR, IN ANY CASE, TAMPERED WITH; - DO NOT PUT BATTERIES/BATTERY PACKS/RECHARGEABLE BATTERIES IN YOUR MOUTH. IF SWALLOWED, PROMPTLY CONTACT YOUR DOCTOR OR LOCAL POISON CONTROL CENTRE - DO NOT CAUSE SHORT CIRCUITS, TO AVOID BURNS OR FIRE - IN CASE OF SWELLING OF BATTERIES/BATTERY PACKS/ACCUMULATORS, DISCONTINUE USE AND DISPOSE OF THE DEVICES IN ACCORDANCE WITH APPLICABLE REGULATIONS NOTE: THE PRODUCT CONTAINS A NON-REMOVABLE BATTERY THAT MUST NOT BE REMOVED.

DANGER: DAMAGE AND/OR SPILLS! FAILURE TO OBSERVE THE FOLLOWING WARNINGS ABOVE COULD RESULT IN RISK OF ELECTRIC SHOCK, DAMAGE/OUTFLOW OF LIQUID, OVERHEATING, EXPLOSION OR FIRE AND CAUSE SERIOUS PERSONAL INJURY AND/OR PROPERTY DAMAGE.

MAIN COMPONENTS



1. Grille
2. Plug
3. Cleaning Brush
4. Removable back compartment

USE

Insert the pest killer in the socket.

- Suitable for indoor use only;
- The appliance is to be kept out of reach of children;
- The appliance is not to be used in locations where flammable vapour or explosive dust is likely to exist.

CLEANING

Always remove the appliance from the socket before cleaning: clean out the tray at the back once a week with warm soapy water; dry the tray completely before replacing; carefully use the supplied brush to clean of any remaining insects; clean the appliance once a month with a soft non-abrasive cloth

WARRANTY CONDITIONS

This guarantee is intended to be delivered to the consumer, meaning by consumer the one who uses the good for purposes unrelated to any business or professional activity carried out, and, therefore, for domestic / private use only. Furthermore, it does not in any way affect the consumer's rights established by Legislative Decree 206/05. This certificate must be kept together with the tax receipt or other document made fiscally mandatory.

1. Galileo SpA guarantees the appliance for a period of 2 years from the purchase date (12 months if purchased with an invoice and not with a receipt).
2. The guarantee is valid exclusively on Italian territory including the Republic of San Marino and the Vatican City, and it must be proven by a receipt or any other proof of purchase, bearing the name of the Point of Sale, the purchase date of the appliance as well as the identification details of the same (type, model).
3. The guarantee covers the free replacement or repair of the component parts of the appliance which were found to be defective at the origin due to manufacturing defects.
4. Within a year of life of the product, the defect is considered as existing at the origin, subsequently its existence must be proven.
5. Knobs, lamps, glass and plastic parts, pipes and accessories, as well as all removable parts and all aesthetic parts are not covered by the guarantee, any aesthetic defects must be found and reported immediately after purchase.
6. All materials susceptible to wear (rubber / plastic seals, belts, etc.) are not covered by the guarantee unless the defect is proven to be dated back to a manufacturing origin.
7. Galileo SpA declines all responsibility for any damages that may arise, directly or indirectly to persons and things, as a consequence of failure to comply with all the instructions from the user, and especially as concerning the ones included in the specific manual for the use provided with each appliance, and, in particular, as regards the warnings relating to installation, use and maintenance of the appliance itself.

THE WARRANTY DOES NOT BECOME EFFECTIVE IN THE FOLLOWING CASES:

- a. Damage due to transport or handling of goods
- b. Incorrect installation and assembly interventions, as well as incorrect connection or incorrect supply from the electricity supply networks, lack of connection to the earth socket, and any incorrect adjustments
- c. Incorrect, imperfect or incomplete installation due to incapacity of a proper use by the User or by the installer, if the instructions for conservation and use of the same provided in the manuals are not respected, excessive environmental climatic conditions, etc.
- d. The warranty does not apply to problems exclusively related to failure to meet the customer's subjective expectations
- e. Damage caused by atmospheric agents (lightning, earthquake, fire, flood, etc.)
- f. Repairs, modifications or tampering carried out by unsuitable personnel. For failures due to lack of regular maintenance (cleaning of condenser coils, condensate water drainage holes, drain filters and water inlet, elimination of foreign bodies, limestone, etc.)
- g. No proof of purchase
- h. Improper use of the appliance, not of the domestic type or other than as established by the manufacturer
- i. For all external circumstances that are not attributable to manufacturing defects.

**Galileo S.p.A. - C.F/ P.I. 08442821008, Capitale Sociale 500.000 I.V., Rea RM - 1094899
Strada Galli n. 27, 00019 Tivoli, Roma**

Kooper[®]

